
PARTS LIST

IN-PLANT ETT TILT TABLE

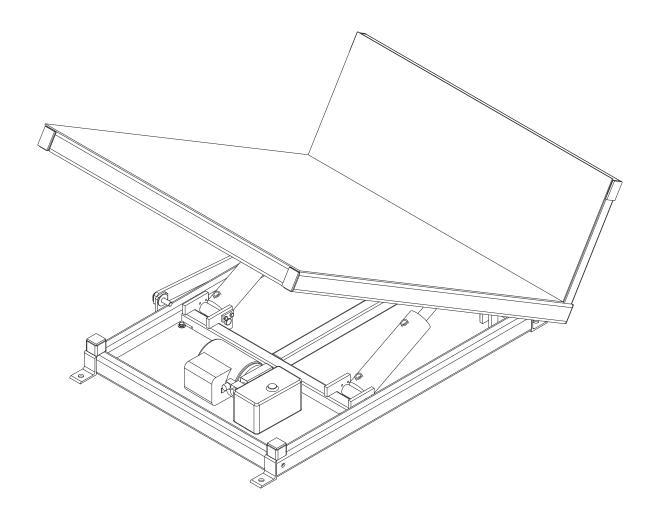

ACTUAL PRODUCT MAY NOT APPEAR EXACTLY AS SHOWN

AWARNING


Do not operate or service this product unless you have read and fully understand the entire contents of this manual. Failure to do so may result in bodily injury or death.



1.0 TILT TABLE MECHANICAL ASSEMBLY

This diagram shows a detailed view of the tilt table assembly.

NOTE: Actual product may not appear exactly as shown.

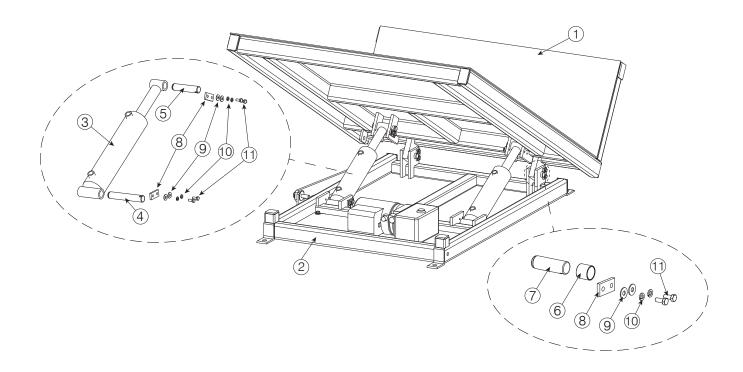

ITEM	QTY	PART NO.	DESCRIPTION	
3	2	Varies on Model	CYLINDER ASSY, 3"DIA, 8-5/8" STROKE, S/A	
4	2	2022722	PIN, 1" OD X 6" L SUPERIOR SHAFTING	
5	2	2022724	PIN, 1" OD X 4-1/2" L SUPERIOR SHAFTING	
6	2	018-017 FIBERGLIDE 1in ID X 1-1/8in OD X 1in L - PSA-1127-1		
7	2	2022723	2022723 PIN, 1" OD X 3" L SUPERIOR SHAFTING	
8	6	2018378 PIN RETAINER PLATE		
9	12	012-211 WASHER,FLAT,ZN PLD,5/16,PREFERRED		
10	12	012-200 WASHER,LOCK,SPG,REGULAR,5/16,PREFERRED		

ITEM	QTY	PART NO.	DESCRIPTION	
11	12	010-037	SCREW,CAP,HEX HD,5/16-18x0.75X0.75,-,PREFERRED	
12	1	Varies on Model	HOSE,23 3/4 in LG,#6 HIGH PRESSURE	
13	2	Varies on Model	HOSE,21 1/8 in LG,#6 HIGH PRESSURE	
14	1	071-0065	FITTING,ELBOW,45DEG,6502-06-06	
15	6	071-0075	SWIVEL,FJX-06-06	
16	2	071-0070	FTNG;ELBOW;90DEG; 3/8JIC	
17	1	034-551	#6 JIC RUN TEE FITTING	
18	2	071-0004	VELOCITY FUSE,1/4MALE NPT X 3/8MALE JIC	
19	1	Varies on Model	del PENDANT,2 BUTTON, 251200	
20	2	2023630-03	MAINT. STRUT,ETT45,3/8" X 2" X 15"L	

1.1 RECOMMENDED PARTS


1.2 STANDARD OPERATIONAL COMPONENTS

	tilt table STANDARD OPERATIONAL COMPONENTS				
ITEM	QTY	PART NO.	DESCRIPTION		
3	2	Varies on Model	CYLINDER ASSY, 3"DIA, 8-5/8" STROKE, S/A		
4	2	2022722	PIN, 1" OD X 6" L SUPERIOR SHAFTING		
5	2	2022724	PIN, 1" OD X 4-1/2" L SUPERIOR SHAFTING		
6	2	018-017	FIBERGLIDE 1in ID X 1-1/8in OD X 1in L - PSA-1127-1		
7	2	2022723	PIN, 1" OD X 3" L SUPERIOR SHAFTING		
8	6	2018378 PIN RETAINER PLATE			
9	12	012-211 WASHER,FLAT,ZN PLD,5/16,PREFERRED			
10	12	012-200 WASHER,LOCK,SPG,REGULAR,5/16,PREFERRED			

1.3 OPTIONAL SUPPORT COMPONENTS

	tilt table OPTIONAL COMPONENTS				
ITEM	QTY	PART NO.	DESCRIPTION		
11	12	010-037	SCREW,CAP,HEX HD,5/16-18x0.75X0.75,-,PREFERRED		
12	1	Varies on Model	HOSE,23 3/4 in LG,#6 HIGH PRESSURE		
13	2	Varies on Model	HOSE,21 1/8 in LG,#6 HIGH PRESSURE		
14	1	071-0065	FITTING,ELBOW,45DEG,6502-06-06		
15	6	071-0075	SWIVEL,FJX-06-06		
16	2	071-0070	FTNG;ELBOW;90DEG; 3/8JIC		
17	1	034-551	#6 JIC RUN TEE FITTING		
18	2	071-0004	VELOCITY FUSE,1/4MALE NPT X 3/8MALE JIC		
19	2	071-0004	VELOCITY FUSE,1/4MALE NPT X 3/8MALE JIC		
20	8	012-238	WASHER,SPACER,1/2X1X5/64,NP		


	tilt table HOSES				
ITEM	QTY	PART NO.	DESCRIPTION		
12	1	Varies on Model	HOSE,23 3/4 in LG,#6 HIGH PRESSURE		
13	2	Varies on Model	HOSE,21 1/8 in LG,#6 HIGH PRESSURE		
14	1	071-0065	FITTING,ELBOW,45DEG,6502-06-06		
15	6	071-0075	071-0075 SWIVEL,FJX-06-06		
16	2	071-0070	FTNG;ELBOW;90DEG; 3/8JIC		
17	1	034-551	#6 JIC RUN TEE FITTING		
18	2	071-0004	VELOCITY FUSE,1/4MALE NPT X 3/8MALE JIC		

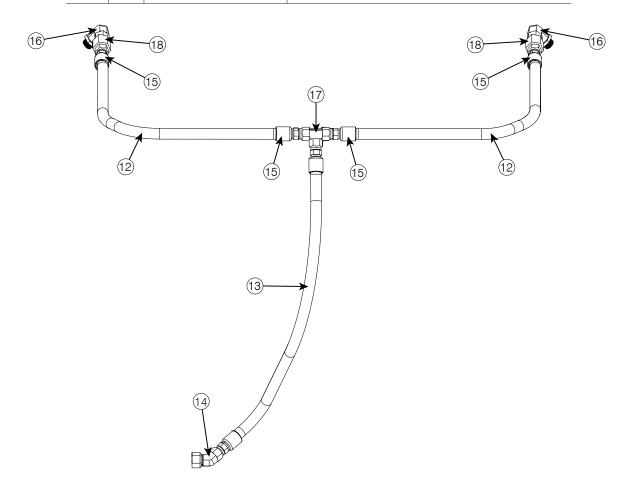

1.4 TILT TABLE ROLLING END


This diagram displays the tilt table and the field replaceable parts.

NOTE: Actual product may not appear exactly as shown.

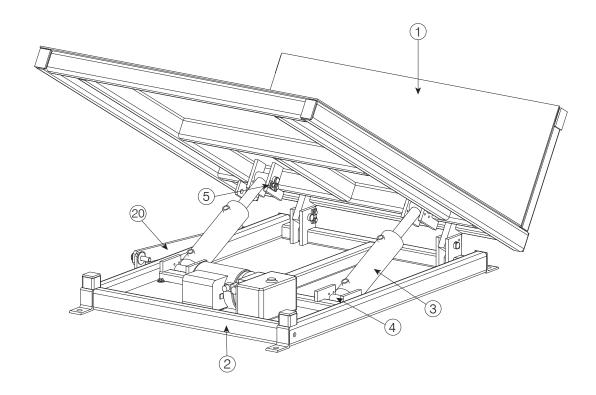


1.5 TILT TABLE LOWER FRAME AND ROLLING END DETAIL

This diagram displays the tilt table skeleton and the lower frame components.

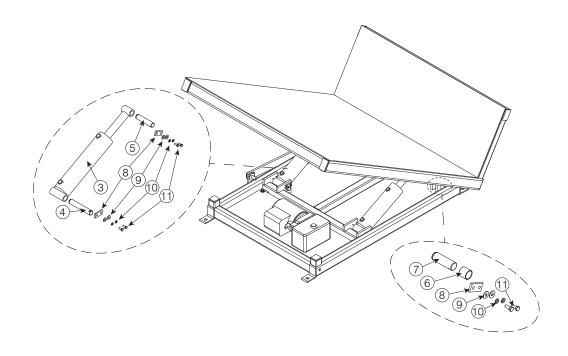

1.6 TILT TABLE UPPER FRAME AND FIXED END DETAIL


This diagram displays the tilt table and the lower frame components.

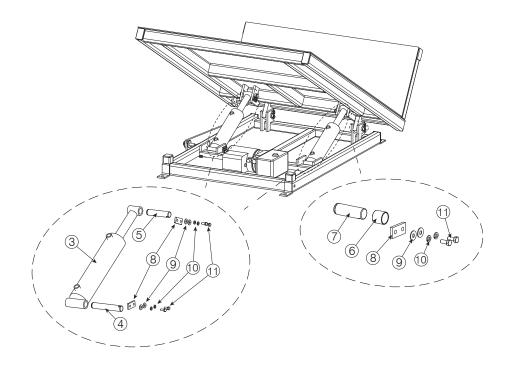

1.7 ACCORDION SAFETY SKIRT

This diagram displays the accordion safety skirt hangers (if present) under the deck and where to anchor it on the lower frame.

NOTE: Actual product may not appear exactly as shown.

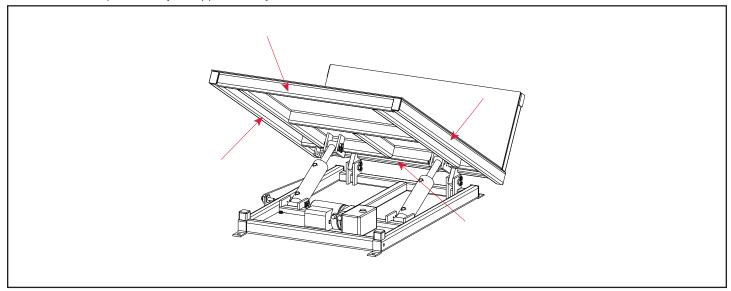




2.0 POWERPACK PART INDENTIFICATION

The assembly and parts of the Powerpack are listed below for easy reference.

NOTE: Refer to the electrical drawings for specific wiring requirements

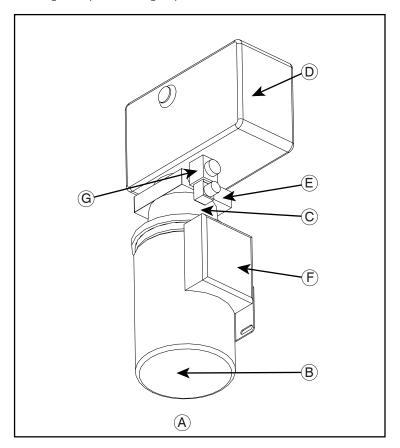

TII	TILT TABLE POWERPACK PART NUMBER # VARIES ON MODEL				
ITEM	QTY	DESCRIPTION			
Α	1	POWERPACK 1HP //60 GPM			
В	1	Motor			
С	1	Pump (not shown)			
D	1	Tank/Reservoir			
E	1	Manifold			
F	1	Junction Box			
G	1	SV1			
Н	1	Pressure Port			
1	1	Electrical Connection			


2.1 HYDRAULIC SCHEMATIC

This diagram illustrates a sample (tilt power up and gravity power down) Powerpack hydraulic circuit.

NOTE: Alway refer to site documentation for installation specifics.

TRUTH TABLE:

ACTION	MOTOR	SV1
DECK UP	Χ	
DECK DOWN		Х

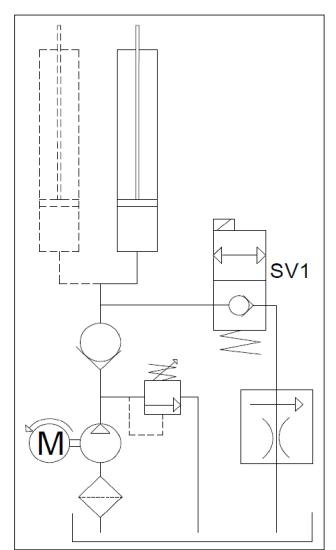


HYDRAULIC SCHEMATIC

3.0 DECAL INDENTIFICATION AND LOCATION

These labels inform operators and personnel about hazardous areas on and around the tilt table.

NOTE: Actual product may not appear exactly as shown.

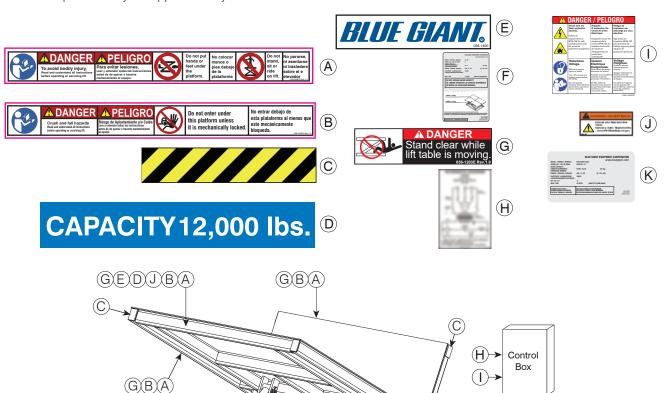

Call out	Qty	Part No.		Description
	2 or 4		EF	
Α	(varies on table size)	038-045	ES	Warns personnel to read operating instructions before using the tilt table and warn of possible bodily injury
	2 or 4		EF	Warns personnel to employ the Maintenance Strut and Service Stand before working on and under the
В	(varies on 038-046 table size)	038-046	ES	tilt table
С	4	038-237		Safety Stripe tape to alert personnel of hazardous areas and edges (i.e. toe guards, edges)
D	2	(varies on model)		Deck Capacity (example only) (locations may vary)
Е	2	038-1400		Blue Giant logo (locations may vary)
F	2	038-1106EFS		Nameplate to identify the tilt table, serial number, and load transfer capacities
G	1 or 2	038-1203	E S	Warns personnel to stand clear of tilt table and the immediate area while it is in operation
Н	1	114-308		Wiring diagram for facility hookup (Keep in electrical box) (Sample only shown)
I	1	038-1105EFS		Reminds personnel to lock out the electrical feeds before attempting work on the tilt table (on exterior of electrical box)
J	2	038-1097		Proposition 65 Cancer and Reproductive Harm Warning - California only (locations may vary)
K	1	038-1107EFS		Rated deck capacity and electrics (Located on Powerpack)

OPERATION PLACARD

A WARNING

APPLIES TO BLUE GIANT SCISSOR LIFTS

Do not operate this scissor lift without proper training and authorization.

READ AND UNDERSTAND THE FOLLOWING:

The instructions and warnings on this placard and in the owner's manual.

The warnings on the scissor lift decals.

Do NOT go under the scissor lift platform to clean or perform routine maintenance unless the Maintenance Strut and Service Stand are safely and securely engaged.

Prior to using the scissor lift:

- Verify that all safety devices (guard rails, restraint chains, toe guards, and warning bells-if equipped) are in place and functioning properly.
- Operate the scissor lift through one complete lift / lower cycle and verify its proper operation. Inspect the scissor lift for signs of structural damage or mechanical malfunction. If damage is observed or the unit fails to operate properly, remove them from service and notify maintenance personnel immediately.

Do NOT exceed the capacity as stated on the nameplate.

Ensure that the scissor lift serial nameplate is present and legible.

Do NOT leave the control station where it can be accidently operated or damaged.

Be aware that lift capacity may be reduced when loads are rolled over the platform sides or edges. Refer to the nameplate for reduced capacity under these conditions.

If loads are mobile, secure them in a fixed position before operating the scissor lift.

Lift operator(s) must be present during all steps of operation.

Lift operator(s) must keep an unobstructed view of lift, any operation light/horn/bell, and other operators to ensure safe operation.

Ensure that all personnel near the scissor lift are aware that it is being operated.

Keep objects, control cables, spills, possible trip hazards, and debris away from around or under the scissor lift platform/lip and its travel path.

If the scissor lift is equipped with a hinged bridge(s), the bridge must overlap the trailer bed by a minimum of 4" (102mm) before use. Do not use the bridge if it is supported solely by the lifting chain.

Hinged lips may drop unexpectedly, keep people and objects clear of the area immediately under or near the lip.

If maintenance or service is required:

- Only authorized service personnel shall provide maintenance / service on the lift.
- Follow approved lockout procedures.
- Do NOT work on or under the lift without properly engaging the lift's maintenance strut. Blue Giant recommends the use of a secondary means (serivce stand) of securing the scissor lift while preforming repairs under the deck.
- The lift shall not be modified or altered without written approval from an authorized Blue Giant representative.
- Maintain records of repairs and preventive maintenance reports.



